



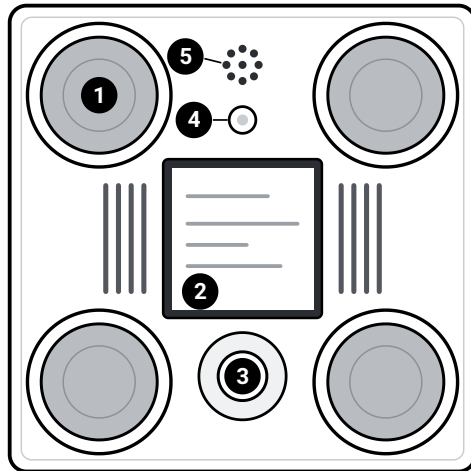

the listening face — keep all of it clear

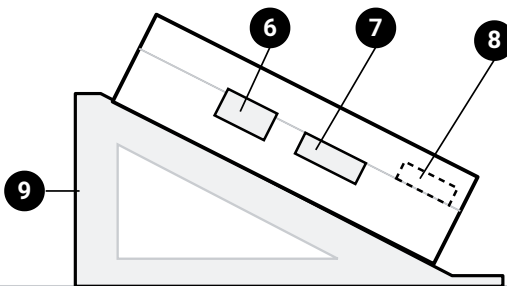

91 mm across, 137 g




In the box

- The unit, 91 × 91 × 29 mm
- Stand with belt clip
- USB power adapter and a USB-A to USB-C cable
- This card

Set it up

- 1 Slide the unit onto the stand until it clicks.
- 2 Stand it on any firm, level surface. It does not need to be up high.
- 3 Turn it so the **tilted face points at the open ground** you are watching. The stand sets the angle — do not prop it flatter.
- 4 Space the units **in a line, roughly 20 m apart**, along the stretch you want covered. One hears it, they all sound.
- 5 Keep it **out of direct sun**, and a few metres from generators, fans and air conditioners.
- 6 Plug in the adapter, with a **loop in the cable** below the socket so rain runs off.
- 7 Master switch to ON, and leave it. Two seconds later the screen reads LISTENING. After that, use the button.

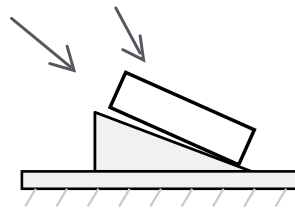

It sits on the stand, tilted.

That angle is the aim. Keep the sky above it and the sides around it clear.

Power and care

- On mains: leave the adapter plugged in permanently. The battery is the backup and must stay fitted.
- On battery alone it runs roughly **14 to 20 hours**. Turned off with the button it draws almost nothing.
- Once a week: green blink present, screen sensible, alert count noted.
- Never cover the cones, paint it, wash it, or remove the antenna.

The button

One tap

Ten seconds of quiet. It keeps listening.

Two taps

Opens the test pages. Tap again for the second page, once more to go back to listening.

Hold, two seconds

Turns the unit off. Hold again to turn it on. This is the normal way to switch it off.


Hold, on a test page

First page: radio check — every other unit beeps. Second page: turns the screen a quarter turn, and it remembers.

The light


- ● A short green blink every two seconds — listening, all well.
- ● Fast red — alert now.
- ● Steady blue — silenced, still listening.
- ○ Nothing at all — the unit is off. Hold the button to bring it back.

The screen

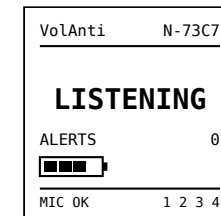


Listening

The normal page. Alerts so far, battery, unit ID.

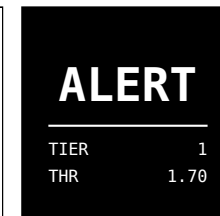

Alert

Which tier fired, and the threshold it crossed.

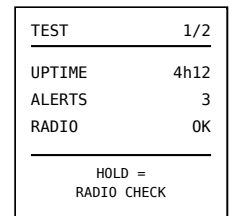

Test

Two taps to reach it. The bottom line always says what holding will do.

The screen keeps its last picture even with no power. If it reads LISTENING but the light is not blinking green, the unit is off and the picture is stale. You may also see LOW BATT or BATTERY EMPTY.

1 Microphone cones, four. Never cover or paint.

3 The button, a clear dome.

5 Beeper.

7 USB-C, power and charging.

9 Stand. The unit clicks in and sits at its working angle.

2 Screen. Readable in daylight.

4 Status light.

6 Master switch. Leave it ON.

8 Radio slot, side wall. No metal near it.

When it alerts


full-volume beeping, buzzing, red light, ALERT on the screen

Seven seconds of alarm, five seconds of quiet, then seven more if it can still hear something. Every other unit in the line sounds at the same time, so the warning travels along the road with it.


It stops and returns to listening on its own. You never have to press anything to clear it. One tap buys ten seconds of quiet if you need to speak.

Act first, check afterwards. Some alerts will be false — a passing vehicle, a strong gust. Treat every one as real anyway, then tell whoever looks after the units: date, time, and what you saw or heard.

הצד המאזין – יש לשמור עליו פנוי

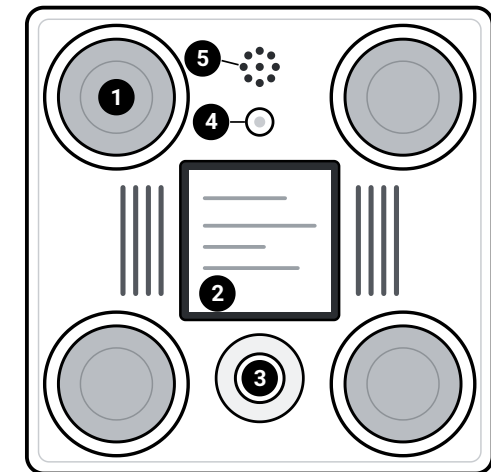

91 מ"מ רוחב, 137 גרם

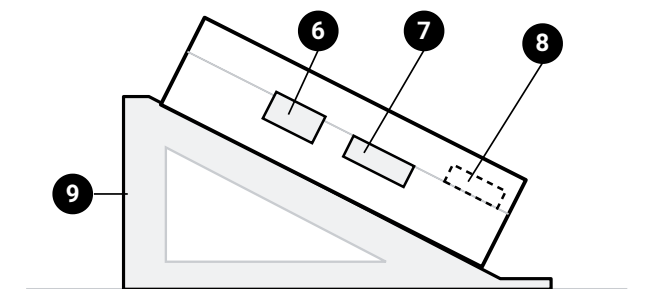


- 1 ארבעה משפכי מיקרופון. אין לכסות ואין לצבוע.
- 2 מסך. קריא גם באור יום.
- 3 הלחצן, כיפה שקופה.
- 4 נורית מצב.
- 5 הזמזום.
- 6 מתג ראשי. משאירים אותו על ON.
- 7 שקע USB-C, חשמל וטעינה.
- 8 חריץ אנטנה בדופן. בלי מתכת בקרבתו.
- 9 מעמד. היחידה נכנסת בנקישה ויושבת בזווית העבודה.

מה יש בקופסה

- היחידה, 91 × 91 × 29 מ"מ
- מעמד עם תפס
- מטען חשמל 5 וולט, וכבל USB-A ל-USB-C
- הכרטיס הזה

התקנה

- 1 החליקו את היחידה על המעמד עד שנשמעת נקישה.
- 2 הניחו אותה על כל משטח יציב ומאוזן. אין צורך בגובה.
- 3 סובבו אותה כך שהצד המשופע פונה אל השטח הפתוח שרוצים לכסות. המעמד קובע את הזווית – אין לשנות אותה.
- 4 פרסו את היחידות בשורה, במרווחים של כ-20 מטר, לאורך הקטע שרוצים לכסות. כשיחידה אחת שומעת, כולן מצפצפות.
- 5 לא בשמש ישירה, וכמה מטרים ממזגנים, גנרטורים ומאווררים.
- 6 חברו את המטען. השאירו לולאה בכבל מתחת לשקע כדי שמי גשם יזלגו החוצה.
- 7 העבירו את המתג הראשי ל-ON והשאירו אותו שם. אחרי כשתי שניות יופיע במסך LISTENING. מכאן והלאה מדליקים ומכבים בלחצן.

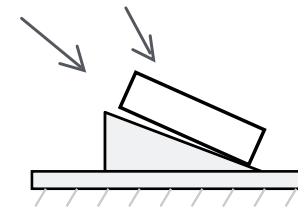

היחידה יושבת על המעמד, בשיפוע.

השיפוע הזה הוא הכיוון. השאירו פנויים את השמיים מעליה ואת הצדדים סביבה.

חשמל ותחזוקה

- יחידה על רשת החשמל: השאירו את המטען מחובר כל הזמן. הסוללה הפנימית היא הגיבוי וחייבת להישאר במקומה.
- על הסוללה בלבד היחידה פועלת כ-14 עד 20 שעות. כשהיא כבויה בלחצן היא כמעט אינה צורכת חשמל ויכולה לשבת שבועות.
- אחת לשבוע: הבהוב ירוק קיים, מסך הגיוני, ורישום מספר ההתרעות.
- אין לכסות את המשפכים, לצבוע, לשטוף או להסיר את האנטנה. אין לפתוח את היחידה בחוץ.

הלחצן

לחיצה אחת

שתי לחיצות

לחיצה ארוכה, שתי שניות

לחיצה ארוכה בעמוד בדיקה

עשר שניות של שקט. היחידה ממשיכה להאזין.
פתיחת עמודי הבדיקה. לחיצה נוספת לעמוד השני, ועוד אחת חזרה למסך ההאזנה.
כיווי היחידה. לחיצה ארוכה נוספת מדליקה אותה. זו הדרך הרגילה לכבות.
בעמוד הראשון: בדיקת קשר – כל שאר היחידות מצפצפות. בעמוד השני: סיבוב המסך ברבע סיבוב, והוא נשמר.

הנורית

- הבהוב ירוק קצר כל שתי שניות – מאזינה, הכול תקין.
- אדום מהיר – התרעה עכשיו.
- כחול קבוע – מושתקת, וממשיכה להאזין.
- כבויה לגמרי – היחידה כבויה. לחיצה ארוכה תחזיר אותה.

המסך

TEST	1/2	VolAnti	N-73C7
UPTIME	4h12	ALERT	
ALERTS	3	TIER	1
RADIO	OK	THR	1.70
HOLD = RADIO CHECK		LISTENING	
		ALERTS	0
		MIC OK	1 2 3 4

בדיקה

שתי לחיצות מגיעות לכאן. השורה התחתונה תמיד אומרת מה תעשה לחיצה ארוכה.

התרעה

איזה שלב זיהוי פעל, ובאיזה סף.

האזנה

המסך הרגיל. התרעות עד כה, סוללה, מספר יחידה.

המסך שומר את התמונה האחרונה גם בלי חשמל. אם כתוב LISTENING אבל הנורית אינה מהבהבת ירוק, היחידה כבויה והתמונה ישנה. ייתכנו גם ההודעות LOW BATT או BATTERY EMPTY.

קודם פועלים, בודקים אחר כך. חלק מההתרעות יהיו התרעות שווא – רכב חולף, משב רוח חזק. בכל זאת יש להתייחס לכל התרעה כאמיתית, ואחר כך לעדכן את האחראי על היחידות: תאריך, שעה ומה נראה או נשמע.

שבע שניות של אזעקה, חמש שניות שקט, ואז שבע נוספות אם היחידה עדיין שומעת משהו. כל שאר היחידות בשורה מצפצפות באותו הרגע, כך שההתרעה עוברת לאורך הדרך יחד איתו. היחידה נעצרת וחוזרת למסך ההאזנה לבד. אף פעם לא צריך ללחוץ על שום דבר כדי לאפס אותה. לחיצה אחת קונה עשר שניות של שקט אם צריך לדבר.

כשיש התרעה

צפצוף בעוצמה מלאה, רטט, נורית אדומה והכיתוב ALERT במסך